


# SINGLE POST PULL ASSEMBLY

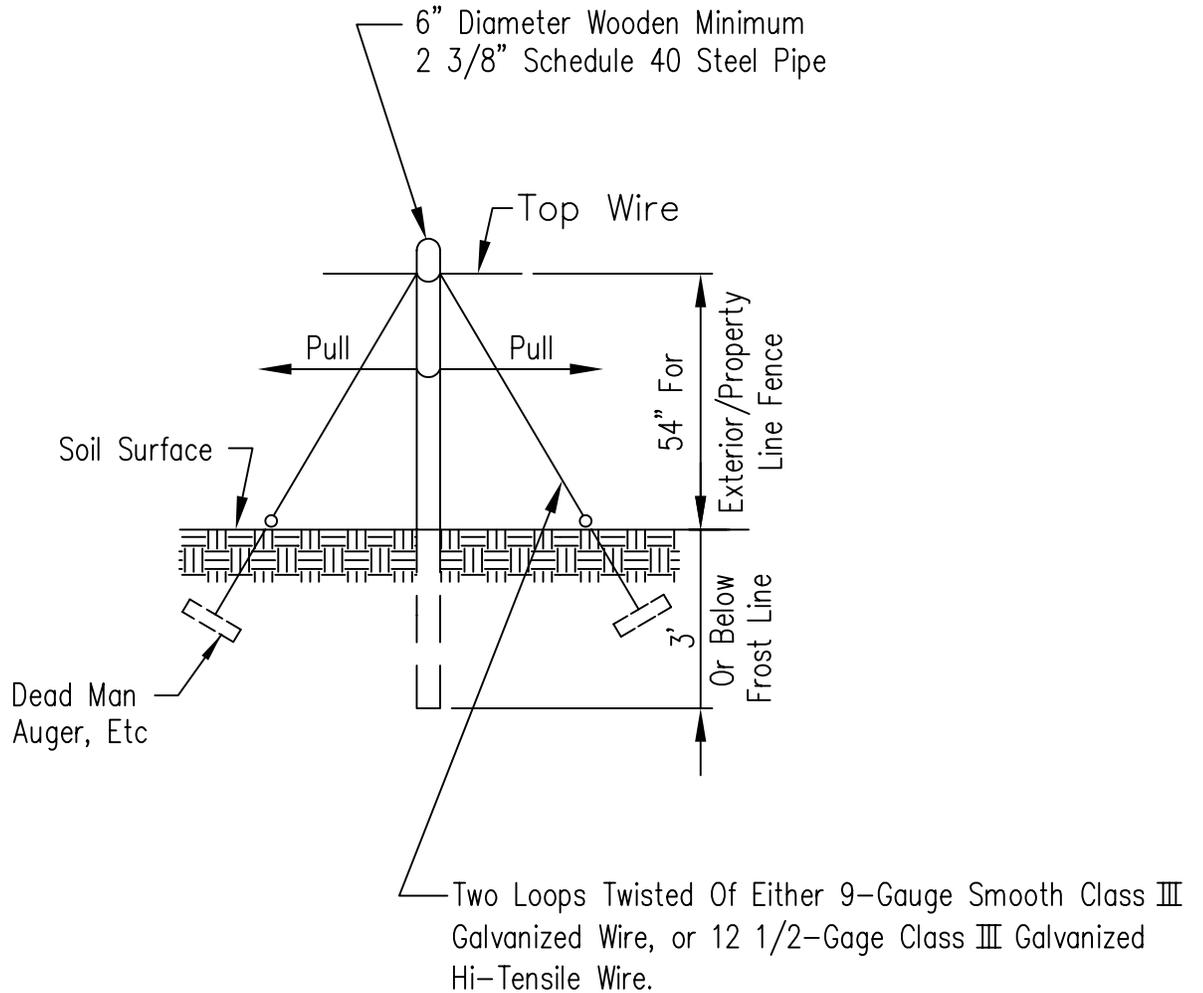

\* All Wires Must Be Tied Off And End Or Begin At Pull Post.

REFERENCE  
 Project \_\_\_\_\_  
 Designed \_\_\_\_\_ Date \_\_\_\_\_  
 Checked \_\_\_\_\_ Date \_\_\_\_\_  
 Approved \_\_\_\_\_ Date \_\_\_\_\_



STANDARD DWG. NO.  
**IL-811B**  
 SHEET 1 OF 1  
 DATE 12-06