



Attach tensioning wires for tightening brace - may use staples to secure wire; may make small notches in brace post to accept wire.

Make small cut on brace post to provide a flat surface to rest on plate.

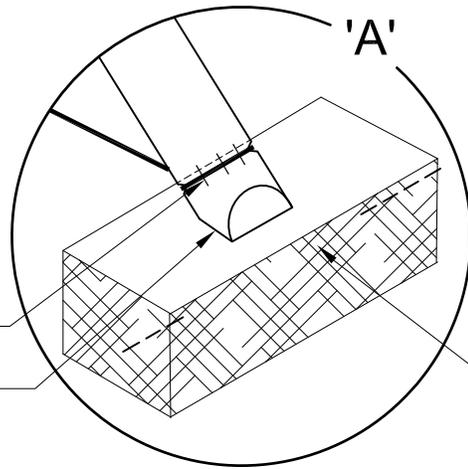

Steel-reinforced concrete block, solid flat stone, steel plate, solid concrete or $\geq 2''$ treated lumber. Must be a minimum of 200 sq. in.

DETAIL 'A'

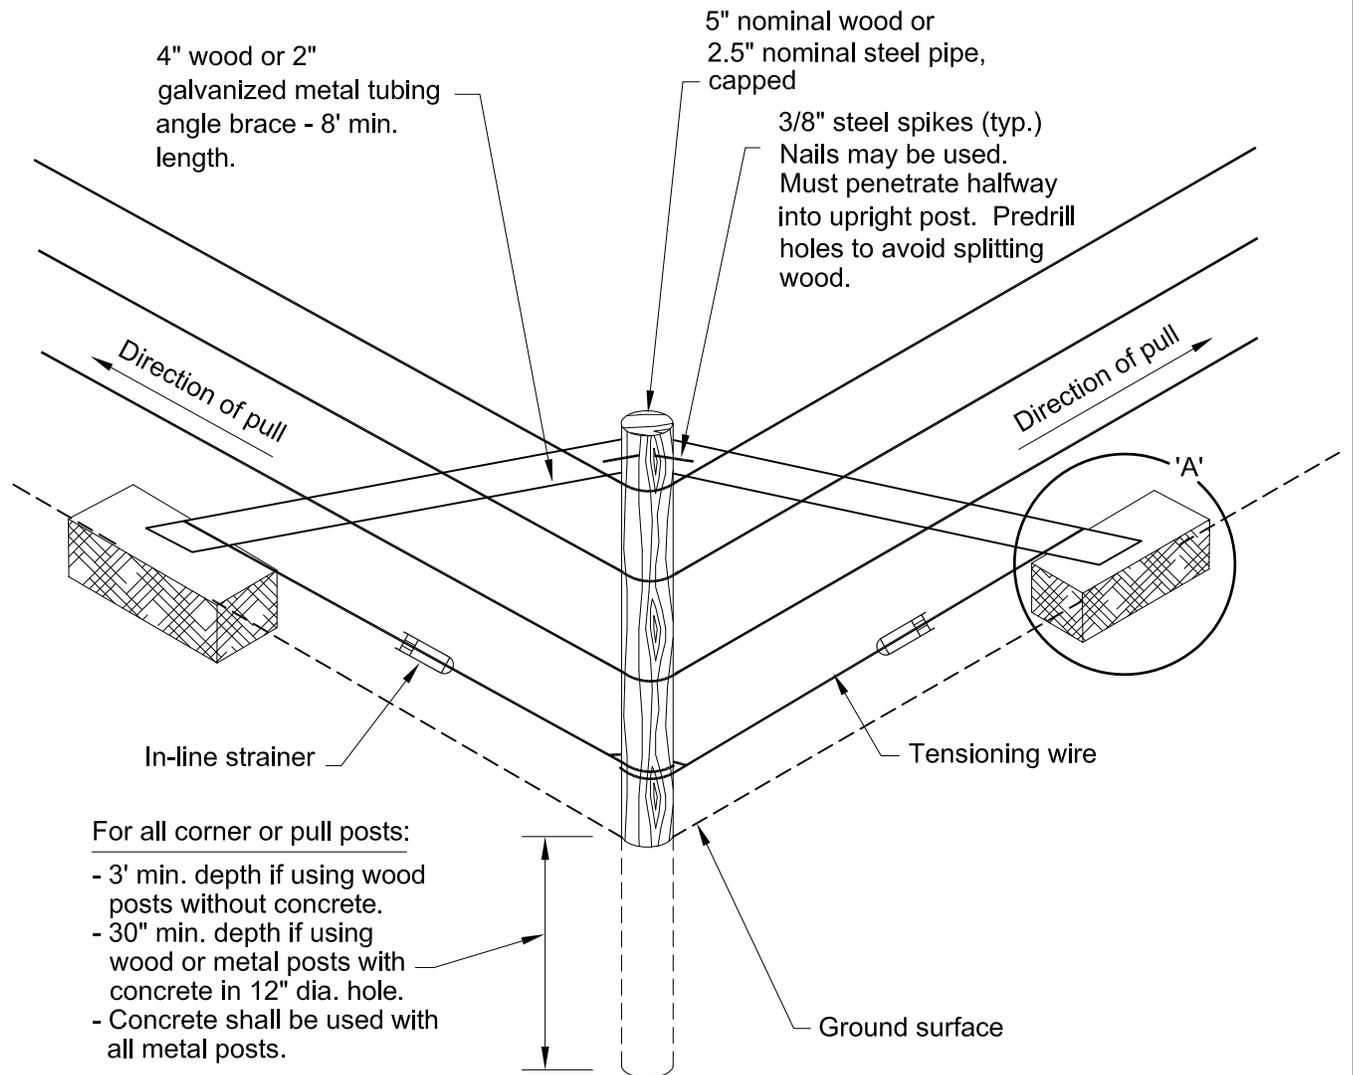

For all corner or pull posts:

- 3' min. depth if using wood posts without concrete.
- 30" min. depth if using wood or metal posts with concrete in 12" dia. hole.
- Concrete shall be used with all metal posts.

SINGLE POST CORNER OR ANGLE BRACE
ASSEMBLY WITH SLIDING PLATE



Natural Resources Conservation Service
United States Department of Agriculture

Designed _____	Date _____	File Name _____
Drawn _____		Drawing Name AL-ECS-382-01
Checked _____		Rev. 2/16
Approved _____	5/12	Sheet of _____