




EROSION CONTROL BLANKETS ON STREAMBANKS

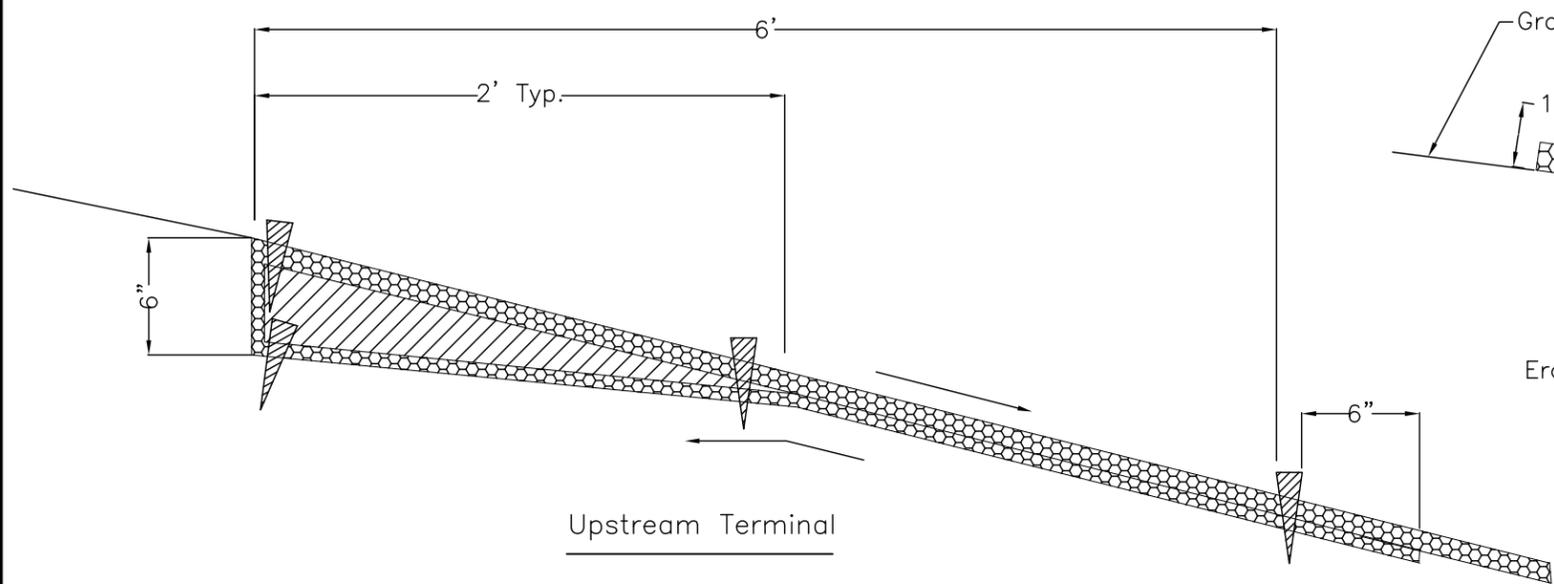


Upstream Terminal

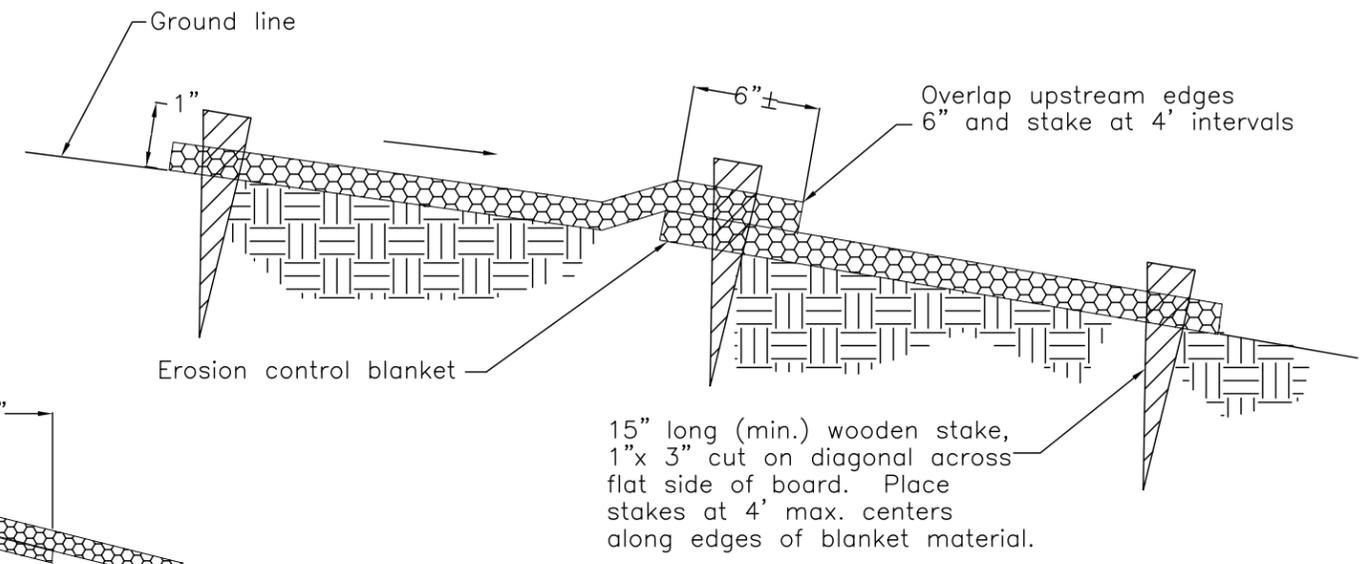

Erosion Control Blanket Details

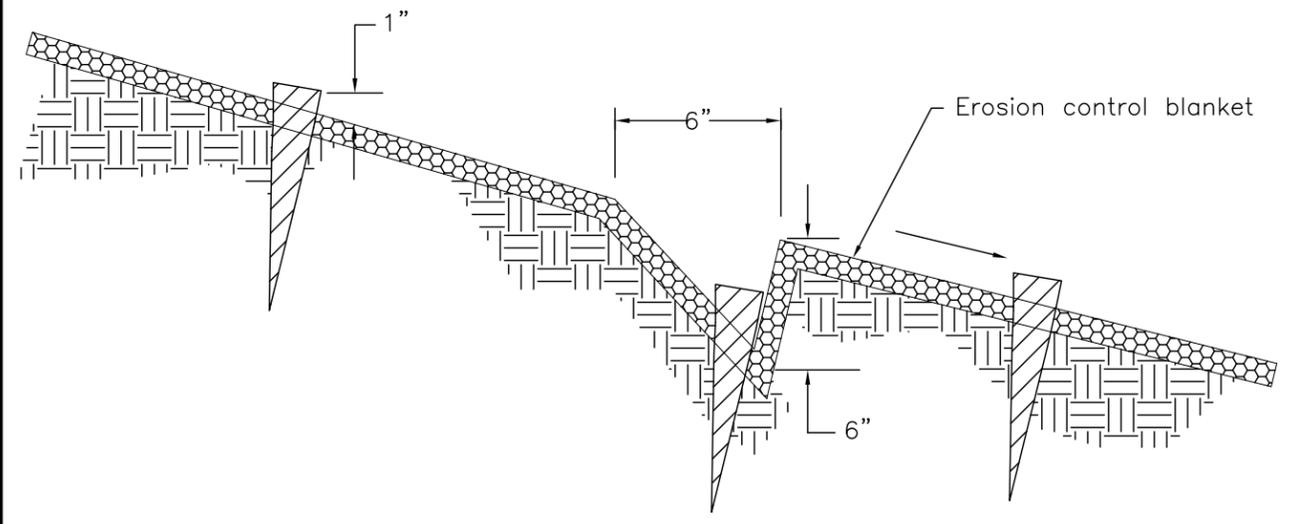

Transverse Check
 (See note no. 4)

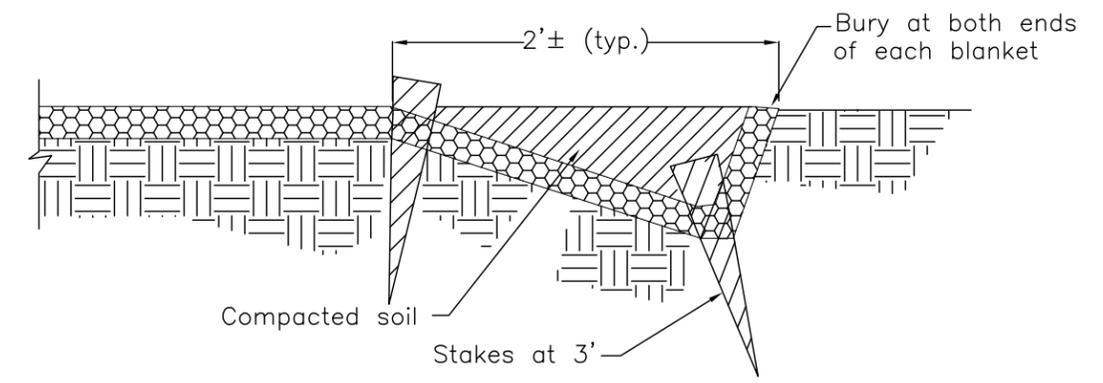

Downstream Terminal

Notes:

1. The arrow indicates the direction of unrolling the blanket for installation.
2. Place stakes at 6' max. centers along edges of blanket material.
3. "U" shaped metal pins as recommended by the manufacturer may be used in lieu of wooden stakes.
4. Where slopes exceed 10%, the blanket material shall be buried in transverse check slots at least 6" deep and at intervals not to exceed 30' along the slope.
5. Where used in combination with live posts, cut erosion control blanket as necessary to fit around the posts and place extra stakes at the cut corners.
2. Align blankets parallel to stream bank.