

**NATURAL RESOURCES CONSERVATION SERVICE
CONSERVATION PRACTICE STANDARD**

ACCESS ROAD

(Ft.)

CODE 560

DEFINITION

A travel-way for equipment and vehicles constructed as part of a conservation plan.

PURPOSE

To provide a fixed route for vehicular travel for resource activities involving the management of timber, livestock, agriculture, wildlife habitat, and other conservation enterprises while protecting the soil, water, air, fish, wildlife, and other adjacent natural resources.

CONDITIONS WHERE PRACTICE APPLIES

Where access is needed from a private or public road or highway to a land use enterprise or conservation measure, or where travel ways are needed in a planned land use area.

Access roads range from seasonal-use roads, designed for low speed and rough driving conditions, to all-weather roads heavily used by the public and designed with safety as a high priority. Some roads are only constructed for a single purpose; i.e. control of forest fires, logging and forest management activities, access to remote recreation areas, or access for maintenance of facilities.

CRITERIA

Access roads shall be designed to serve the enterprise or planned use with the expected vehicular or equipment traffic. The type of vehicle or equipment, speed, loads, soil, climatic, and other conditions under which vehicles and equipment are expected to operate need to be considered.

Where general public use is anticipated, roads shall be designed to meet applicable federal, state and local criteria.

Location. Roads shall be located to serve the purpose intended, to facilitate the control and disposal of surface and subsurface water, to control or reduce erosion, to make the best use of topographic features, and to include scenic vistas where possible. The roads should generally follow natural contours and slopes to minimize disturbance of drainage patterns. Roads shall be located where they can be maintained and where water management problems are not created. To reduce potential pollution, roads shall be located away from water bodies and watercourses. Overland flow should not be impeded. Utilize buffers where possible to protect water bodies.

Alignment. The gradient and horizontal alignment shall be adapted to the intensity of use, mode of travel, the type of equipment and load weights, and the level of development.

Grades normally should not exceed 10 percent except for short lengths. Maximum grades of 18 percent should only be exceeded if necessary for special uses such as logging roads, field access roads, fire protection roads, or other roads not accessible for use by the general public.

For stream crossings, the road should be aligned so that it crosses perpendicular to the channel as much as possible.

Width. The minimum width of the roadbed is 16 feet for one-way traffic and 28 feet for two-way traffic. The roadbed width includes a tread-width of 12 feet for one-way traffic or 24 feet for two-way traffic. Each type of road

ACCESS ROAD (560)-2

also requires 2 feet of shoulder width on each side. Single-lane logging or special-purpose roads can have a minimum width of 10 feet, with greater widths at curves and turnouts. The two-way traffic width shall be increased approximately 4 feet for trailer traffic. The shoulder width may be either gravel or grass.

Turnouts shall be used on single-lane roads where vehicles travel in both directions on a limited basis. Where turnouts are used, road width shall be increased to a minimum of 20 feet for a distance of at least 30 feet.

Side Slopes. All cuts and fills shall be designed to have stable slopes. On cut or fill heights of less than 4 feet, slopes should be 2 horizontal to 1 vertical or flatter. For short lengths, rock areas, or very steep hillsides, steeper slopes may be permitted, if soil conditions warrant and special stabilization measures are installed.

Areas with geological conditions and soils subject to slides shall be avoided or treated to prevent slides.

Drainage. The type of drainage structure used will depend on the intended use and runoff conditions. Culverts, bridges, fords, or grade dips for water management shall be provided at all natural drainage ways. The capacity and design shall be consistent with sound engineering principles and shall be adequate for the class of vehicle, type of road, development, or use. When a culvert or bridge is installed in a drainage way, its minimum capacity shall convey the design storm runoff without causing erosion or road overtopping. Table 1 lists minimum design storm frequencies for various road types.

Table 1

| Road Type | Storm Frequency |
|--|----------------------|
| Forest Access Roads, Farm Field Access Roads | 2 year - 24 Hour |
| Farm Driveways, Recreation Facility Access Roads | 10 year - 24 Hour |

| | |
|--|----------------------|
| Public Access Roads, Camp grounds, etc. | 25 year - 24 Hour |
|--|----------------------|

An erosion-resistant low point or overflow area may be constructed across the access road to supplement culvert capacity on non-public use roads. Culverts, bridges, fords, and hardened overflow areas should be installed so the road crossing does not significantly impact fish migration.

Roadside ditches shall be adequate to provide surface drainage for the roadway and deep enough, as needed, to serve as outlets for subsurface drainage. At a minimum, the roadside ditch shall be 1.0 foot below the top of road surface to provide internal drainage. Ditch channels shall be designed to be on stable grades or protected with structures or linings for stability.

Water breaks, water bars, diversions, or broad-based dips may be used to control surface runoff on low-intensity use forest, ranch, or similar roads. On steep grades where runoff and erosion is anticipated down the road, water bars should be considered. Water bars must be constructed of materials that are compatible with the use and maintenance of the road surface. Water bar discharge areas must be well vegetated or have other erosion resistant materials. See Figure 1 Recommended Spacing of Relief Culverts and Water Bars Based on Soil Type.

Surface crowning can also help direct road runoff into the side drainage ditches. Unobstructed flow into the ditches must be maintained to prevent flows from causing roadside erosion. Provide a turnaround at the end of dead-end roads. In some areas, turnarounds may also be desirable for stream, lake, recreation, or other access purposes.

Surfacing. Access roads shall be given a wearing course or surface treatment if required by traffic needs, soil, climate, erosion control, or particulate matter emission control. The type of treatment, if needed, depends on local conditions, available materials, and the existing road base. If these factors or the volume of traffic

are not a problem, no special treatment of the surface is required. On weak bearing capacity soils such as silts, organics, and clays, the surface treatment should be underlain with a geotextile material specifically designed for road stabilization applications, or an appropriate rock aggregate sub-base, when the road is used on a regular basis.

Unsurfaced roads may require controlled access to prevent damage or hazardous conditions during adverse climatic conditions.


Toxic and acid-forming materials shall not be used on roads. This should not be construed to prohibit use of chemicals for dust control and snow and ice removal after considering potential impacts on stabilizing vegetation.

Utilize additional conservation practices to reduce the potential for generation and transport of particulate matter emissions.

Construction Operations. Construction operations should be carried out in such a manner that erosion and air and water pollution are minimized and held within legal limits. Construction shall include the following requirements as necessary:

1. Trees, stumps, roots, brush, weeds, and other objectionable material shall be removed from the work area.
2. Unsuitable material shall be removed from the roadbed area.
3. Grading, sub-grade preparation, and compaction shall be performed as needed.
4. Surfacing shall be performed as needed.
5. Measures must be in place to limit the generation of particulate matter during construction.

Figure 1. Recommend Spacing of Relief Culverts and Water Bars Based on Soil Types

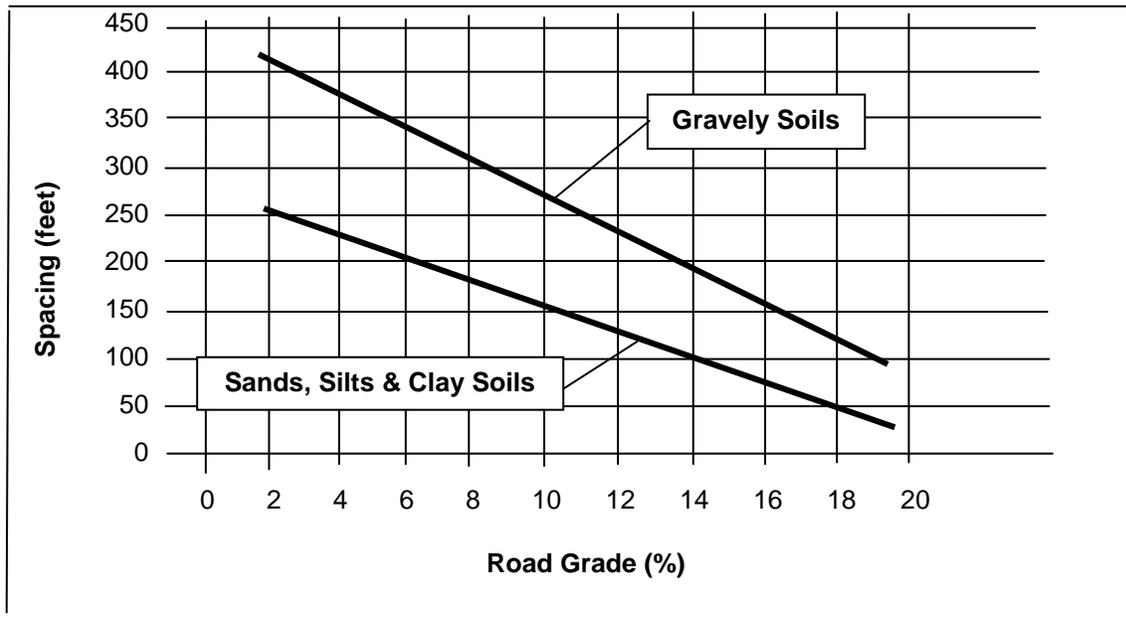

Traffic Safety. Passing lanes, turnouts, guardrails, signs, and other facilities as needed for safe traffic flow shall be provided. Traffic safety shall be a prime factor in selecting the angle and grade of

the intersection with public highways. Preferably, the angles shall be not less than 85 degrees. The public highway shall be entered either at the top of a hill or far enough from the top or a curve to provide

ACCESS ROAD (560)-4

visibility and a safe sight distance. The clear-sight distance to each side shall not be less than 300 feet or as required by local regulations.

Turn-around areas shall be provided at the end of dead-end roads. Turn- arounds may also be desirable at access areas to streams, lakes, recreation, and other areas.

Parking areas shall be provided to help keep vehicles off of the road surface or parking in undesirable locations.

Erosion Control. If soil and climatic conditions are favorable, road banks and disturbed areas shall be vegetated as soon as possible; and skid trails, landings, logging, and similar roads shall be vegetated after harvesting or seasonal use is completed (see Conservation Practice Standard, Critical Area Planting 342). If the use of vegetation is precluded and protection against erosion is needed, protection shall be provided by non-vegetative materials, such as gravel or other organic or inorganic material (see Conservation Practice Standard, Mulching 484), or in accordance with local regulations.

Roadside channels, cross drains, and drainage structure inlets and outlets shall be designed to be stable (see Conservation Practice Standard, Structure for Water Control 587). If protection is needed, riprap or other similar materials shall be used.

Watercourses and water quality shall be protected during and after construction by erosion-control facilities and maintenance. Filter strips, water and sediment control basins, and other conservation practices shall be used and maintained as needed.

CONSIDERATIONS

Consider visual resources and environmental values during the planning and designing of the road system.

Consider matching culvert or bridge openings to the width/depth ratio of the active stream channel dimensions.

Consider road alignments and grades that will minimize collection of snow in road cuts.

Consider the use of 3:1 (H:V) or flatter cut and fill slopes if they are to be mowed.

Access roads should be located where minimal adverse impacts will affect wetlands, water bodies, watercourses, wildlife habitat, and air quality.

Consideration should be given to the following:

- Effects on downstream flows or aquifers that would affect other water uses or users.
- Effects on the volume and timing of downstream flow to prohibit undesirable environmental, social, or economic effects.
- Short-term and construction-related effects of this practice on the quality of on-site downstream water courses.
- Overall effects on erosion and the movement of sediment, pathogens, and soluble and sediment-attached substances that would be carried by runoff from construction activities.
- Effects on wetlands and water-related wildlife habitats that would be associated with the practice.
- Establishing vegetation on road shoulders wider than the 2-4 ft.
- Limiting vehicle speed to reduce the potential for generation of particulate matter.

PLANS AND SPECIFICATIONS

Plans and specifications for constructing access roads shall be in keeping with this standard and shall describe the requirements for applying the practice to achieve its intended purpose.

OPERATION AND MAINTENANCE

An operation and maintenance plan will be developed and carried out for the life of the practice:

1. Inspect culverts, roadside ditches, water bars, and outlets after each major runoff event and restore flow capacity as needed.
2. Minimize damage to vegetative buffers adjacent to the road when it is necessary to chemically treat the road surface to maintain erosion protection.
3. Maintain vegetated areas with adequate cover to meet the intended purpose(s) and control noxious weeds. Mow and re-seed as needed.
4. Fill low areas in travel treads and re-grade, as needed, to maintain road cross section.
5. Inspect roads with water bars periodically to insure proper cross section is available and outlets are stable.
6. Conservation practices that limit particulate matter emissions should be incorporated into long-term maintenance plans.