



Agronomy Facts 63

**Diagnosing Soil Compaction Using a Penetrometer
 (soil compaction tester)**


Department of Crop and Soil Sciences - Cooperative Extension

THE RATIONALE FOR THE PENETROMETER

Soil compaction is a serious concern for farmers in Pennsylvania. Soil compaction can easily reduce crop yields by 10 percent, and can lead to water and soil quality degradation due to increased runoff and soil structure destruction. The continuous consolidation of farms means that herds are growing, more forage is harvested per farm, more manure is being produced, larger equipment is used to spread manure and harvest and transport forages and grain, and the opportunity to tailor field operations to optimum soil conditions for traffic is decreasing. Compaction is therefore an issue that will likely increase in importance in the years to come.


There are two forms of compaction: surface and subsurface. While surface compaction can be partly alleviated with normal tillage operations, subsurface compaction below the normal tillage depth will remain. Fracturing or cutting subsurface compacted soil has, in some cases, resulted in remarkable yield increases. Many Pennsylvania producers suspect they have a subsurface compaction problem, but have no handle on how to measure it. A diagnostic tool to measure the extent and depth of subsurface compaction is a penetrometer, or soil compaction tester. This tool can help producers determine if subsoiling might be beneficial and at what depth the subsoiler should be set. Several companies sell penetrometers that are all based on the same technical specifications of the American Society of Agricultural Engineers. A penetrometer will cost around \$200.

Figure 1a. A penetrometer, or soil compaction tester, has a graded shaft and separate reading scales for each tip. (Figure courtesy of Dickey John)

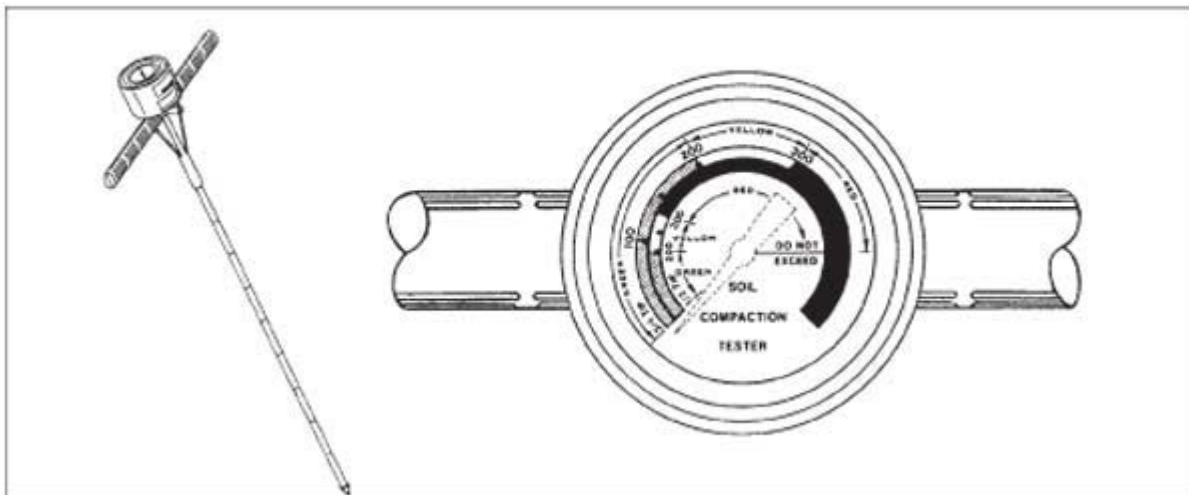

A penetrometer consists of a 30-degree circular stainless steel cone with a driving shaft and a pressure gauge (Figures 1a and 1b). The penetrometer usually comes with two cones, one with a base diameter of 0.798 (3/4) inches for soft soils and the other with a base diameter of 0.505 (1/2) inches for hard soils. The tip is slightly wider than the driving shaft to limit friction of the shaft with the soil. The driving shaft is usually graduated every 3 inches to allow the determination of depth of compaction. The pressure gauge indicates pressure in pounds per square inch (be sure to use the appropriate scale for the tip you are using).

Figure 1b. A penetrometer usually comes with two points (1/2 and 3/4 inch diameter). (Figure courtesy of Dickey John)

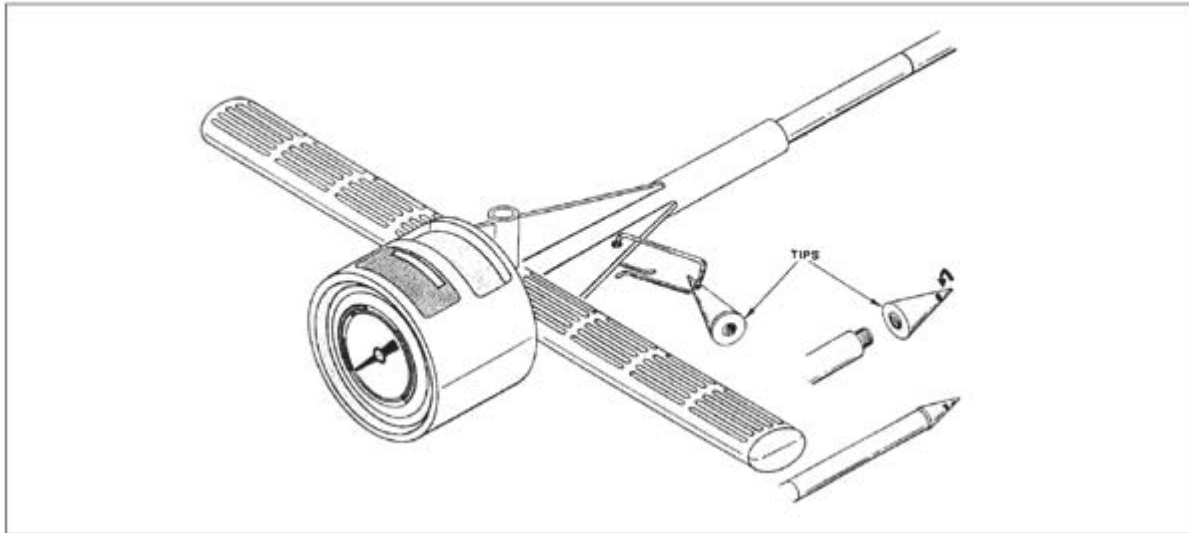

The penetrometer is designed to mimic a plant root. Of course, a plant root is living, and much smaller than a penetrometer, so the penetrometer can be expected to have some shortcomings. In studies conducted at the United States Department of Agriculture's Agriculture Research Service (USDA-ARS), root penetration into soil cores packed to different densities was measured and compared to penetrometer readings. Root penetration decreases linearly with penetration resistance, until almost no roots penetrate into soil with a penetration resistance of 300 psi (Figure 2). Much of this research was done with cotton, but it also appears to hold true for other crops. Although the limit of zero root growth may not be exactly at 300 psi, it is certain that root growth will be greatly inhibited at higher penetrometer readings. This is true in both wet and dry soils, and is independent of soil texture. Unfortunately, the penetrometer does not capture pores created by physical or biological forces such as freezing/ thawing, wetting/ drying, earthworm burrowing, and root channeling. Plant roots will find and grow through these spaces in the soil if they are present.

HOW TO USE THE PENETROMETER

The readings taken with the penetrometer are called the cone index. The readings should be taken when the whole profile is at field capacity (approximately 24 hours after a soaking rain). The best time of the year for the compaction measurement is the spring because the whole profile has usually been

Figure 2. Root penetration and penetration resistance.



thoroughly moistened during the winter. If the soil is too wet (muddy), compaction could be underestimated because the soil acts as a liquid. If the soil is too dry, compaction could be overestimated because roots will be able to penetrate the soil when it dampens. The idea behind using the penetrometer at field capacity is that this is the best-case scenario for roots. Hopefully, the soil will be at field capacity at various times during the growing season. During these periods, roots will be able to penetrate soil that has low penetration resistance. Penetration resistance will increase when the soil dries out, and root growth can then be expected to be limited. However, when the moisture content of the soil increases again, penetration resistance will decrease, and root growth will resume.

The penetrometer rod should be driven in the soil at a rate of approximately 1 inch per second. As you push the penetrometer into the soil, record the depth at which the 300 psi level is exceeded, using the gradients on the penetrometer rod. This level is the top of the compacted zone. Continue pressing the penetrometer down. Record the depth at which the penetration falls below 300 psi. This is the bottom of the compacted zone. For each measuring point, there are two numbers: the top of the compaction zone and the bottom of the compaction zone. If penetration resistance never increases above 300 psi, you will have blanks in both spaces, indicating no severe root-limiting compaction. If the penetration resistance increases above 300 psi, but never falls below 300 psi, there is no bottom to the compaction zone.

Cone index should be measured respective to tillage relief, wheel tracks, plant rows, and other recognizable patterns in the field. For example, if you know the areas of wheel traffic, take transects in and out of the track, and report them separately. If there are subsoiled zones in the field, measure penetration resistance in and out of the subsoiled zone. If there are planted rows, take measurements in and between the rows, and report them separately. Take separate readings for trafficked and non-trafficked areas.

The number of readings in a field depends on the accuracy you desire. As a first approximation, take some preliminary readings at a few places in the field to develop a sampling strategy. The cone index values are likely to be quite variable, so multiple readings are required per field. It is recommended to take one reading every 100 to 150 feet, or three to four readings per acre to develop a solid recommendation. This is a useful spacing if no recognizable patterns are present. If you recognize patterns, you may wish to increase the number of readings and report them separately as suggested above. It is extremely useful to compare the cone index values in the field with measurements in undisturbed areas such as fence rows.

After completing the sampling, a recommendation can be formulated using table 1.

The measurement of the lower boundary of the compaction zone determines the depth of subsoiling. If subsoiling is recommended, run the subsoiler 1 inch below the compaction zone. Setting the subsoiler much deeper will not provide additional benefits. If subsoiling is done, it is important to eliminate the cause of compaction to avoid recompaction. Subsoiling should only be considered to be a measure of last resort, not an annual management practice. These recommendations are based on research conducted at the University of Kentucky. With time, we hope to validate them in Pennsylvania.

Table 1. Interpretation of penetration resistance measurements.

Percentage of measuring points having cone index > 300 psi in top 15 inches	Compaction rating	Subsoiling recommended
<30	Little-none	No
30-50	Slight	No
50-75	Moderate	Yes
>75	Severe	Yes
Adapted from: Lloyd Murdock, Tim Gray, Freddie Higgins, and Ken Wells, 1995. Soil Compaction in Kentucky. Cooperative Extension Service, University of Kentucky, AGR-161.		

Prepared by Sjoerd W. Duiker, assistant professor of soil management.

Visit Penn State's College of Agricultural Sciences on the Web: www.cas.psu.edu

Penn State College of Agricultural Sciences research, extension, and resident education programs are funded in part by Pennsylvania counties, the Commonwealth of Pennsylvania, and the U. S. Department of Agriculture.

This publication is available from the Publications Distribution Center, The Pennsylvania State University, 112 Agricultural Administration Building, University Park, PA 16802. For information telephone 814-865-6713.

Issued in furtherance of Cooperative Extension Work, Acts of Congress May 8 and June 30, 1914, in cooperation with the U.S. Department of Agriculture and the Pennsylvania Legislature. T. R. Alter, Director of Cooperative Extension, The Pennsylvania State University.

Where trade names appear, no discrimination is intended, and no endorsement by the Penn State College of Agricultural Sciences is implied.

This publication is available in alternative media on request.

The Pennsylvania State University is committed to the policy that all persons shall have equal access to programs, facilities, admission, and employment without regard to personal characteristics not related to ability, performance, or qualifications as determined by University policy or by state or federal authorities. The Pennsylvania State University does not discriminate against any person because of age, ancestry, color, disability or handicap, national origin, race, religious creed, sex, sexual orientation, or veteran status. Direct all inquiries regarding the nondiscrimination policy to the Affirmative Action Director, The Pennsylvania State University, 201 Willard Building, University Park, PA 16802-2801; Tel. (814) 865-4700/ V; (814) 863-1150/ TTY.

© The Pennsylvania State University 2002

CAT UC178 2.5M10/ 02ps3141

Diagnosing Soil Compaction Using a Penetrometer - Field Sheet

Landowner: _____

Date: _____

Planner: _____

Soil moist and at field capacity: Yes / No

Field # _____

Field # _____

Field # _____

Take reading every 100 ft - min. 5 readings per acre	Upper level (in)	Lower level (in)	Take reading every 100 ft - min. 5 readings per acre	Upper level (in)	Lower level (in)	Take reading every 100 ft - min. 5 readings per acre	Upper level (in)	Lower level (in)
Reading 1			Reading 1			Reading 1		
Reading 2			Reading 2			Reading 2		
Reading 3			Reading 3			Reading 3		
Reading 4			Reading 4			Reading 4		
Reading 5			Reading 5			Reading 5		
Reading 6			Reading 6			Reading 6		
Reading 7			Reading 7			Reading 7		
Reading 8			Reading 8			Reading 8		
Reading 9			Reading 9			Reading 9		
Reading 10			Reading 10			Reading 10		
Reading 11			Reading 11			Reading 11		
Reading 12			Reading 12			Reading 12		
Reading 13			Reading 13			Reading 13		
Reading 14			Reading 14			Reading 14		
Reading 15			Reading 15			Reading 15		
Reading 16			Reading 16			Reading 16		
Reading 17			Reading 17			Reading 17		
Reading 18			Reading 18			Reading 18		
Reading 19			Reading 19			Reading 19		
Reading 20			Reading 20			Reading 20		
Percent >300			Percent >300			Percent >300		
Lowest Level (in)			Lowest Level (in)			Lowest Level (in)		
Compaction rating (table 1)			Compaction rating (table 1)			Compaction rating (table 1)		
Subsoiling recommended	Yes / No		Subsoiling recommended	Yes / No		Subsoiling recommended	Yes / No	

The penetrometer rod should be driven in the soil at a rate of approximately 1 inch per second. As you push the penetrometer into the soil, record the depth at which the 300 psi level is exceeded, using the gradients on the penetrometer rod. This level is the top of the compacted zone. Continue pressing the penetrometer down. Record the depth at which the penetration falls below 300 psi. This is the bottom of the compacted zone. For each measuring point, there are two numbers: the top of the compaction zone and the bottom of the compaction zone. If penetration resistance never increases above 300 psi, you will have blanks in both spaces, indicating no severe root-limiting compaction. If the penetration resistance increases above 300 psi, but never falls below 300 psi, there is no bottom to the compaction zone.